 





Original	Rechange
 Power	 Power
 Info	 Info
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Nicam	 Shift + Dual
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 EPG	 Guide
 Recall	 Back
 Freeze	 Pause
 Sleep	 Sleep
 Menu	 Menu
 Source	 AV
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Vol -	 Vol -
 Vol +	 Vol +
 CH -	 Ch -
 CH +	 Ch +
 Txt / Repeat	 Text
 Hold / A-B	 Shift + Pause





Original	Rechange	Original	Rechange
 Mix / Language	 Shift + Text	 Rec / Open/Close	 Rec
 Subtitle /	 Subt	 T-Shirt	 3D
 Index / Setup	 Options	 Page Up / I<<	 I<<
 Size / DVD	 D. Menu	 Page Down /	 >>I
 Reveal / Title	 Smart		
 Cancel / Exit / Zoom	 Exit		
 Red / Program	 Red		
 Green / Goto	 Green		
 Yellow / Angle	 Yellow		
 Blue / D.Dis	 Blue		
 Play / Pause	 Play		
 List / Stop	 Stop		
 List / Stop	 List		
 DTV/Radio / <<<	 TV/R		
 DTV/Radio / <<<	 <<<		
 Fav / >>>	 Pre Ch		
 Fav / >>>	 >>>		

