



 



 






 












 























 



















Original	Recharge	Original	Recharge
 Power	 Power	 Vol -	 Vol-
 Input	 AV / Input / RDS	 Format	 Picture / Format
 1	 1	 Prog -	 CH- / Page-
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 Menu	 Menu / Home
 7	 7	 Media	 Display / Media
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 Guide	 Guide / EPG / -/--	 OK	 OK
 0	 0	 Right	 Right
 Infos	 Info / Angle	 Back	 Back / Return
 Vol +	 Vol+	 Down	 Down
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Prog +	 CH+ / Page+	 AD	 Audio / Lang I/II





Original	Recharge
 Subtitles	 Subtitle / EQ
 Text	 Text / Goto
 Radio	 TV/Radio /
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >> / Preset+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Recharge

