 
 




































Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 C	 Subtitle / EQ
 Aspect	 Picture / Format
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right

Original	Rechange
 Down	 Down
 Quit	 Back / Return
 Vol +	 Vol+
 Liste	 Smart / List
 P +	 CH+ / Page+
 Vol -	 Vol-
 P -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/-





Original	Recharge	Original	Recharge
 0	 0		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Play / Pause	 Shift + Play /		
 C	 Shift + Subtitle / EQ		
 Retour	 Shift + Back / Return		

Original	Recharge

