







 



 

 

 



 



 



 



 


 
 



 













 




 












Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Left / Vol -		Left
	1		1		Left / Vol -		Vol-
	2		2		OK		OK
	3		3		Right / Vol +		Right
	4		4		Right / Vol +		Vol+
	5		5		Sub-T		Subtitle / EQ
	6		6		Down / CH -		CH- / Page-
	7		7		Down / CH -		Down
	8		8		Info		Info / Angle
	9		9		I<<		I<< / Preset-
	TTX		Text / Goto		<<		<< / Tune-
	0		0		>>		>> / Tune+
	FAV		Fav / Marker / PC		>>		>>  / Preset+
	Menu		Menu / Home		Red / TV/R		Red / Netflix / Search
	Up / CH +		Up		Red / TV/R		TV/Radio /
	Up / CH +		CH+ / Page+		Green / Media		Green / APP / Repeat



