



Original	Rechange
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Original	Rechange
Sound	Sound / Title
Up / Prog +	Shift + Up
Up / Prog +	Up
Left / Vol -	Left
Left / Vol -	Shift + Left
Right / Vol +	Shift + Right
Right / Vol +	Right
CTRL	D.Menu / Top
Down / Prog -	Down
Down / Prog -	Shift + Down
Mute	Mute / Dimmer
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	Shift + Yellow / YouTube /
Normal / Title	Shift + Sound / Title





Original	Rechange
CVBS 1	+ 1 Shift + 1
CVBS 2	+ 2 Shift + 2
CVBS 3	+ 3 Shift + 3
Y.Pb.Pr.	SETUP Setup / OPT /
YC 1	+ 4 Shift + 4
YC 2	+ 5 Shift + 5
PC	FAV MARKER Fav / Marker / PC
DVI	+ D.MENU Shift + D.Menu / Top Menu
MTS Reveal / MTS	+ BACK Shift + Back / Return
SLEEP Size / Sleep	+ ZOOM Shift + Zoom /
TIME Index / Time	SLEEP Sleep / Timer
PREPG Freeze / PREPG.	II Pause / Step / Freeze
DELETE Red / Delete	SEARCH Red / Netflix / Search
SKIP Green / Skip	REPEAT Green / APP / Repeat
INSERT Yellow / Insert	REPEAT A-B Yellow / YouTube / Repeat
REPLACE Blue / Replace	RANDOM Blue / Prime Video / Random

Original	Rechange





Original	Rechange
Source	AV / Input / RDS
Power	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Original	Rechange
Sound	Sound / Title
Up / Prog +	Up
Up / Prog +	Shift + Up
Left / Vol -	Shift + Left
Left / Vol -	Left
Right / Vol +	Right
Right / Vol +	Shift + Right
CTRL	D.Menu / Top
Down / Prog -	Down
Down / Prog -	Shift + Down
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	Shift + Yellow / YouTube /
<< / I<<	<< / Tune-
Play / Pause	Play / Slow






Original	Rechange
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Original	Rechange
Sound	Sound / Title
Up / Prog +	Up
Up / Prog +	Shift + Up
Left / Vol -	Shift + Left
Left / Vol -	Left
Right / Vol +	Shift + Right
Right / Vol +	Right
CTRL	D.Menu / Top
Down / Prog -	Shift + Down
Down / Prog -	Down
Mute	Mute / Dimmer
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	Shift + Yellow / YouTube /
Rec / 2nd	Rec / Rec Mode



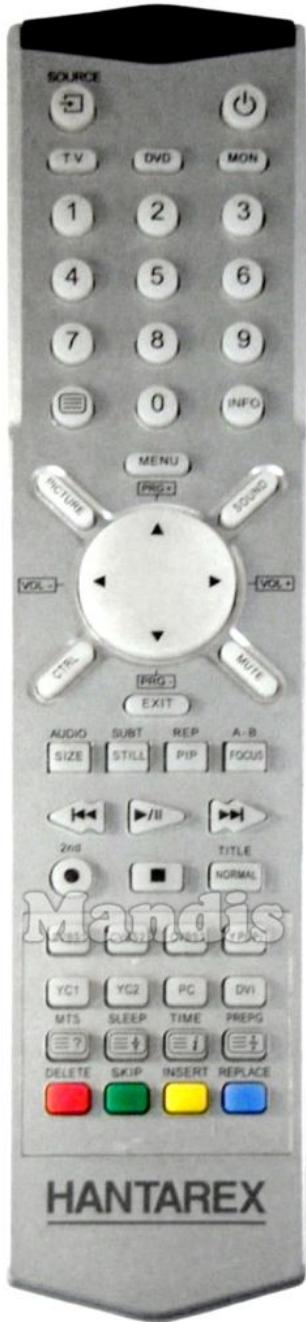

Original	Rechange
Normal / Title	+ Shift + Sound / Title
CVBS 1	+ Shift + 1
CVBS 2	+ Shift + 2
CVBS 3	+ Shift + 3
Y.Pb.Pr.	Setup / OPT /
YC 1	+ Shift + 4
YC 2	+ Shift + 5
PC	Fav / Marker / PC
DVI	+ Shift + D.Menu / Top Menu
Reveal / MTS	+ Shift + Back / Return
Size / Sleep	+ Shift + Zoom /
Index / Time	Sleep / Timer
Freeze / PREPG.	Pause / Step / Freeze
Red / Delete	Red / Netflix / Search
Green / Skip	Green / APP / Repeat
Yellow / Insert	Yellow / YouTube / Repeat
Blue / Replace	Blue / Prime Video / Random

Original	Rechange

