

























 
 
 











 







 

























Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 TV / SAT	 Shift + TV/Radio / Program	 Mode	 D.Menu / Top
 Pause	 Pause / Step / Freeze	 Left	 Left
 Sleep	 Sleep / Timer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Down	 Down
 4	 4	 TV / Rad	 TV/Radio /
 5	 5	 Color	 Picture / Format
 6	 6	 i	 Info / Angle
 7	 7	 Help	 Shift + Info / Angle
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Audio	 Audio / Lang I/II
 RCL	 Setup / OPT /	 Subtitle	 Subtitle / EQ
 0	 0	 Red	 Red / Netflix / Search
 EPG	 Guide / EPG / -/--	 Green	 Green / APP / Repeat
 Menu	 Menu / Home	 Yellow	 Yellow / YouTube / Repeat





Original

Recharge

Original	Recharge
 Blue	 Blue / Prime Video / Random

Original

Recharge

Original	Recharge

