




















Original	Recharge
 Tuner	 Shift + 6
 Power	 Power
 Open / Close	 Eject / Surround
 Aux	 Shift + 7
 DVD	 Shift + 2
 USB	 Shift + 8
 Dimmer	 Shift + Mute / Dimmer
 Prog / Memo	 TV/Radio /
 Audio	 Audio / Lang /II
 Sound	 Sound / Title
 S-Title	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 << / Scan -	 << / Tune-

Original	Recharge
 I<< / Skip -	 I<< / Preset-
 >>I / Skip +	 >>I / Preset+
 >> / Scan +	 >> / Tune+
 Title	 Shift + Sound / Title
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Setup	 Setup / OPT /
 Display	 Display / Media
 Menu	 Menu / Home
 Up / Preset +	 Up
 Return	 Back / Return
 Left / Tun. -	 Left
 Enter	 OK
 Right / Tun. +	 Right
 Down / Preset -	 Down





Original	Rechange
VSM	Smart / List
SLEEP	Sleep / Timer
+ VOL	Vol+
XTS Pro	Text / Goto
MUTE	Mute / Dimmer
VOL -	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
PTY/HDMI	Picture / Format
0	0

Original	Rechange
RDS/RESOL	Info / Angle
TV POWER	Shift + Power
+ PR	CH+ / Page+
+ VOL	Shift + Vol+
INPUT	AV / Input / RDS
PR -	CH- / Page-
VOL -	Shift + Vol-

