



Original	Rechange
Power	Power
Display	Display / Media
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Search Mode	Red / Netflix / Search
0	0
+10	Guide / EPG / -/--
Top Menu	D.Menu / Top
Up	Up

Original	Rechange
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Stop	Stop / Hold
Play/Pause	Play / Slow
II>/Frame	Pause / Step / Freeze
Repeat	Green / APP / Repeat
A-B Repeat	Yellow / YouTube / Repeat
Slow	Shift + Play / Slow





Original	Recharge
 Cancel	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Random/Angle	 Info / Angle
 Random/Angle	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Program	 TV/Radio /
 USB	 Shift + 8
 USB Rec	 Rec / Rec Mode

Original	Recharge

