



Original	Rechange
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Recall	Back / Return
0	0
Source	AV / Input / RDS
Menu	Menu / Home
Guide	Guide / EPG / -/--
Tv/Fav/Radio	Fav / Marker / PC

Original	Rechange
Tv/Fav/Radio	TV/Radio /
Up	Up
Exit	Exit / Cancel / Clear
Left	Left
OK	OK
Right	Right
Down	Down
P +	CH+ / Page+
P -	CH- / Page-
Vol-	Vol-
Vol+	Vol+
Aspect	Picture / Format
→  [ / ]  ←	Zoom / Size
Index / [i+]	Info / Angle
Text / Mix	Text / Goto
[▼]	Smart / List
Dual I/II	Audio / Lang I/II





Original	Recharge
[≡o]	Sleep / Timer
Subtitle	Subtitle / EQ
I<< / [≡?]	I<< / Preset-
<< / Hold	<< / Tune-
>> / Size	>> / Tune+
>>I / [≡x]/[O]	>>I / Preset+
>>I / [≡x]/[O]	Eject / Surround
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

