



 



 



 

 

 

 

















 





 

 



 

 

 

 

 















Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Red / <<		<< / Tune-









 









 

 











 

 













 







 



 

 









	Original	Recharge	Original	Recharge
	 Green / >>	 >> / Tune+		
	 Green / >>	 Green / APP / Repeat		
	 Yellow /  <<	  << / Preset-		
	 Yellow /  <<	 Yellow / YouTube / Repeat		
	 Blue / >>	 Blue / Prime Video / Random		
	 Blue / >>	 >>  / Preset+		
	 Text / Play/Pause	 Text / Goto		
	 Text / Play/Pause	 Pause / Step / Freeze		
	 Text / Play/Pause	 Play / Slow		
	 Stop / Still	 Stop / Hold		
	 Timer / Subtitle	 Subtitle / EQ		
	 Size / Aspect	 Zoom / Size		
	 Cancel [≡X]	 Shift + Exit / Cancel / Clear		
	 Radio	 TV/Radio /		
	 Audio / I/II	 Audio / Lang I/II		
	 Rec	 Rec / Rec Mode		







Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-



