



Original	Recharge
PP	PP
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
M	M
I-II	I-II
OK	OK
V	V
P	P
-	-
+	+
SOUND	SOUND
PICTURE	PICTURE
FEATURE	FEATURE
INSTALL	INSTALL
TV	TV
DVD	DVD
SAT	SAT
AUX	AUX
REC MODE	REC MODE
PRESET	PRESET
EQ	EQ
SURROUND	SURROUND
PROGRAM	PROGRAM
TV RADIO	TV RADIO
RDS	RDS
AV INPUT	AV INPUT
HOME	HOME
ANGLE	ANGLE
INFO	INFO
BACK	BACK
EXIT	EXIT
CANCEL	CANCEL
LIST	LIST
SMART	SMART
MEDIA	MEDIA
DISPLAY	DISPLAY
TV	TV
DVD	DVD
CD - STB	CD - STB
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
GUIDE EPG	GUIDE EPG
FAV MARKER	FAV MARKER
NETFLIX	NETFLIX
APP	APP
YouTube	YouTube
Prime Video	Prime Video
SEARCH	SEARCH
REPEAT	REPEAT
REPEAT A-B	REPEAT A-B
RANDOM	RANDOM
GOTO	GOTO
TEXT	TEXT

Original	Recharge
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Red / Netflix / Search
Green / Picture	Green / APP / Repeat
Green / Picture	Green / APP / Repeat
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto



