 



 

 


 
 




 


 
 

 


 


 

 

 





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 Help	 Shift + Info / Angle
 Home	 Shift + Menu /
 End	 Shift + Exit / Cancel / Clear
 Teletext	 Text / Goto
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 List	 Smart / List
 Media	 Display / Media
 Timer	 Sleep / Timer
 Vol +	 Vol+
 EPG	 Guide / EPG / -/-
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Audio	 Audio / Lang I/II
 CH -	 CH- / Page-

Original	Rechange
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Shift + Left
 OK	 OK
 Right	 Shift + Right
 SAT	 Shift + 0
 Down	 Down
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





	Original	Recharge	Original	Recharge
	9	 9		
	<	 Left		
	0	 0		
	>	 Right		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	<<	 << / Tune-		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	TV	 TV/Radio /		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Radio	 Shift + TV/Radio / Program		

