



 
















 































 







 











 







 



 












Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search








 


























 



 







 







 

 

 









Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search


















 





 









Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	<<	<< / Tune-



