



















 



 



 




 

 
 






 

 

 

 

 

 

 

 

 

 

 



 

 

 


 











 







 



 













Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search








 


























 



 







 







 

 

 













	Original	Rechange	Original	Rechange
	Green / >>	>> / Tune+		
	Green / >>	Green / APP / Repeat		
	Yellow /  <<	<< / Preset-		
	Yellow /  <<	Yellow / YouTube / Repeat		
	Blue / >>	>>  / Preset+		
	Blue / >>	Blue / Prime Video / Random		
	Text / Play/Pause	Text / Goto		
	Text / Play/Pause	Play / Slow		
	Text / Play/Pause	Pause / Step / Freeze		
	Stop / Still	Stop / Hold		
	Radio	TV/Radio /		
	Size / Aspect	Picture / Format		
	Size / Aspect	Zoom / Size		
	[≡x]	Eject / Surround		
	Subtitle / [≡o]	Subtitle / EQ		
	DMP	D.Menu / Top		
	Rec	Rec / Rec Mode		





Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





Original		Rechange		Original	Rechange
	Green		Green / APP / Repeat		
	>>		>> / Tune+		
	Yellow		Yellow / YouTube / Repeat		
	I<<		I<< / Preset-		
	Blue		Blue / Prime Video / Random		
	>>I		>>I / Preset+		
	[≡]		Text / Goto		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	[≡+]		Shift + Stop /		
	Stop/Still		Stop / Hold		
	Radio		TV/Radio /		
	[≡♦]/[++]		Zoom / Size		
	[≡x]		Eject / Surround		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

