



 
 





 
 


 
Original	Rechange	Original	Rechange
Power	Power	Vol -	Vol -
Mute	Mute	CH +	Ch +
1	1	CH -	Ch -
2	2	Exit	Exit
3	3	Red / USB Left	Red
4	4	Red / USB Left	Shift + Left
5	5	Green / USB	Green
6	6	Green / USB	Shift + Down
7	7	Yellow / USB Up	Yellow
8	8	Yellow / USB Up	Shift + Up
9	9	Blue / USB Right	Blue
0	0	Blue / USB Right	Shift + Right
10+	Shift + Guide	Up	Up
SUBTL	Subt	Left	Left
EPG	Guide	Enter	Ok
Menu	Menu	Right	Right
Vol +	Vol +	Down	Down

Original	Rechange	Original	Rechange
Power	Power	Vol -	Vol -
Mute	Mute	CH +	Ch +
1	1	CH -	Ch -
2	2	Exit	Exit
3	3	Red / USB Left	Red
4	4	Red / USB Left	Shift + Left
5	5	Green / USB	Green
6	6	Green / USB	Shift + Down
7	7	Yellow / USB Up	Yellow
8	8	Yellow / USB Up	Shift + Up
9	9	Blue / USB Right	Blue
0	0	Blue / USB Right	Shift + Right
10+	Shift + Guide	Up	Up
SUBTL	Subt	Left	Left
EPG	Guide	Enter	Ok
Menu	Menu	Right	Right
Vol +	Vol +	Down	Down






 

 
 



 

 





 

 
 

 

 
 

 





 

Original		Rechange	
	QV		Options
	FAV		Pre Ch
	Source		AV
	Sleep		Sleep
	Picture		Shift + Format
	Sound		Shift + Dual
	Display		Info
	I/II / Top		Dual
	FAV - / REV		<<
	FAV + / FWD		>>
	USR/CR / Text		Media
	USR/CR / Text		Text
	Play/Pause / Index		Play
	Play/Pause / Index		Shift + Info
	Play/Pause / Index		Pause
	Stop / Cancel		Stop
	Stop / Cancel		Shift + Exit

Original		Rechange	
	Size		Format
	Prog / Mix		Smart
	Prog / Mix		Shift + Sleep
	Return / SUBPG		Back
	Repeat / Reveal		Shift + Back
	Search / Hold		TV/R







Original	Recharge	Original	Recharge
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

