




 





 
 


 

 





 
 


 






 

 

 






 



 

 











 











 


 

 





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	TV		TV/R		Mute		Mute
	VT		Smart		→←		Media
	BTX		Pre Ch		i		Info
	1		1		Guide		Guide
	2		2		Audio		Dual
	3		3		Brightness+		Up
	4		4		Brightness-		Down
	5		5		(+)Color+		Right
	6		6		(+)Color-		Left
	7		7		(O)		Subt
	8		8		[]		Text
	9		9		▲ M		Menu
	0		0		▼↔		Ok
	P+		Ch +		▲[≡>]		>>
	P-		Ch -		▼[--]		<<
	Vol+		Vol +		+ / +		3D





Original	Recharge	Original	Recharge
 MEM/CM	 Rec		
 X Lock	 Options		
 -	 Format		
 [> ≡]	 AV		
 [≡ ♦ ≡]	 Back		
 00:00	 Exit		
 ? [≡ /]	 Eject		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

