


 

 






 



 

 







 

 






 
 




 


 
 

 





 





Original	Rechange	Original	Rechange
 Power	 Power	 List / Goto	 List
 Mute	 Mute	 Menu	 Menu
 Sleep	 Sleep	 Source	 AV
 P.Mode	 Shift + Format	 Aspect	 Format
 S.Mode	 Dual	 Recall	 Back
 Rec	 Rec	 Info	 Info
 DTV	 Smart	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 CH -	 Ch -
 6	 6	 CH +	 Ch +
 7	 7	 Vol -	 Vol -
 8	 8	 Vol +	 Vol +
 9	 9	 Audio	 Shift + Dual
 0	 0	 FAV / Title	 Pre Ch





Original		Recharge		Original		Recharge	
	Exit		Exit		Freeze / Repeat		Shift + Text
	EPG / Display		Guide		TV/Radio / Setup		TV/R
	EPG / Display		Shift + Info		Rec Menu /		Shift + Menu
	Index / I<<		I<<		Rec Menu /		D. Menu
	Hold / >>I		>>I		Red		Red
	Cancel / <<		<<		Green		Green
	Size / >>		>>		Yellow		Yellow
	TTX / A-B		Text		Blue		Blue
	Mix / Play/Pause		Eject				
	Mix / Play/Pause		Play				
	Mix / Play/Pause		Pause				
	Subpage / Stop		Stop				
	Subpage / Stop		Shift + Subt				
	Subtitle		Subt				
	Reveal / Eject		Shift + Exit				
	Freeze / Repeat		Shift + Pause				
	TV/Radio / Setup		Options				

