



Original		Recharge		Original		Recharge	
	On		Power		Input Sel. Tape		Shift + 5
	Standby		Shift + Power		9 CD		9
	1 CD		1		Input Sel. Tuner		Shift + 6
	Input Sel. V1		Shift + 1		+10 / - / - - CD		Fav / Marker / PC
	2 CD		2		0 CD		0
	Input Sel. V2		Shift + 0		Zone 2		Guide / EPG / - / -
	3 CD		3		Dimmer		Shift + Mute / Dimmer
	Input Sel. V3		Shift + 3		Menu		Menu / Home
	4 CD		4		Sleep		Sleep / Timer
	Input Sel. V4		Shift + 4		CH + / Disc +		CH+ / Page+
	5 CD		5		Up		Up
	Input Sel. Multi		Shift + Display / Media		Vol +		Vol+
	6 CD		6		CH - / Disc -		CH- / Page-
	Input Sel. DVD		Shift + 2		Left		Left
	7 CD		7		Ener		OK
	Input Sel. CD		Shift + 9		Right		Right
	8 CD		8		Vol -		Vol-





Original	Rechange	Original	Rechange
Return / Exit	Back / Return	Stereo	Audio / Lang I/II
Return / Exit	Shift + Back / Return	Repeat CD	Green / APP / Repeat
Down	Down	Pure A	Sound / Title
Setup	Setup / OPT /	Direct	D.Menu / Top
Display	Display / Media	Test Tone	Zoom / Size
Muting	Mute / Dimmer	CH Sel	Smart / List
I<< CD	I<< / Preset-	Level -	Shift + CH- /
Play CD	Play / Slow	Level +	Shift + CH+ /
>>I CD	>>I / Preset+	Open / Close CD	Eject / Surround
<< CD	<< / Tune-	L. Night	Shift + Sleep / Timer
< DSP	Shift + << /	Cine FLTR	Picture / Format
Pause CD	Pause / Step / Freeze		
Stop CD	Stop / Hold		
>> CD	>> / Tune+		
DSP >	Shift + >> /		
SURR	Exit / Cancel / Clear		
All ST	Text / Goto		

