
 


 

 

 




Original		Rechange		Original		Rechange	
	Power		Power		Display		Info
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		LCD Menu		Menu
	8		8		Exit		Exit
	9		9		Input		AV
	0		0		PMode		Shift + Format
	-/-		Guide		SMode		Shift + Dual
	Recall		Back		Sleep		Sleep
	Vol +		Vol +		Fav		Pre Ch
	Vol -		Vol -		Fav -		Shift + Down
	Nicam		Smart		Fav +		Shift + Up





	Original	Recharge		Original	Recharge
	Aspect	 Format			
	Play/Pause / Text	 Play			
	Play/Pause / Text	 Pause			
	Play/Pause / Text	 Text			
	Stop / Hold	 Stop			
	Lang	 Dual			
	Subtitle	 Subt			
	>> / Index	 >>			
	<< / Size	 <<			
	>> / Reveal	 >>			
	<< / Subpage	 <<			
	Red	 Red			
	Green	 Green			
	Yellow	 Yellow			
	Blue	 Blue			

	Original	Recharge		Original	Recharge

