

 

 


 





 

 
 




 
 
 
 



 


 





 


 














 

 
 


 



 






Original		Rechange		Original		Rechange	
	Marche / Veille		Power		TV / Radio		TV/R
	Arret Son		Mute		Menu		Menu
	1		1		Quitter		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Rec		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Retour		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	S-Titres		Subt		D.D		Smart





Original		Rechange		Original		Rechange	
	I<< Prev		I<<				
	Play / Lecture		Play				
	<< REW		<<				
	Enreg.	 + 	Shift + Rec				
	>>I Next		>>I				
	Pause		Pause				
	>> FWD		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue / Timer		Blue				
	Blue / Timer		AV				

