



 

 


 
 



 

 



 

 
 
 
 


 

 
 


 





 


 











 


 


 

 
 


 

 
 
 




Original	Recharge
 Power	 Power
 TV Power	 Shift + Power
 TV Channel -	 Ch -
 TV Channel +	 Ch +
 TV Volume -	 Shift + Vol -
 TV Volume +	 Shift + Vol +
 TV / Video	 TV/R
 DVD	 Smart
 Tuner Band	 Shift + Smart
 Aux	 Media
 Title	 Info
 Menu	 Menu
 Audio Mo/St	 Dual
 Subtitle	 Subt
 Display	 Shift + Info
 Return	 Back
 Go To	 Guide

Original	Recharge
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>I
 << / Tuning	 <<
 >> / Tuning Up	 >>
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Volume -	 Vol -
 Volume +	 Vol +
 DSP Mode	 List
 Effect	 3D
 Mute	 Mute





Original	Rechange
 Sleep	 Sleep
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 4 / PTY -	 +  Shift + Left
 5 / PTY Search	 5
 5 / PTY Search	 +  Shift + Ok
 6 / PTY +	 6
 6 / PTY +	 +  Shift + Right
 7	 7
 8	 8
 9	 9
 0	 0
 Sound Edit	 Red
 SPK Mode	 Green
 Pro Logic	 Yellow

Original	Rechange
 Test Tone	 Blue
 Slow	 +  Shift + Play
 Angle	 Format
 Setup	 Options
 TV System	 Eject
 DRC	 AV
 Clear	 Exit
 Repeat	 Text
 Repeat A-B	 +  Shift + Text
 Program	 +  Shift + Sleep
 Step	 +  Shift + Pause
 Remain	 +  Shift + Stop

