




























 






 
 
 



 



	Original	Rechange		Original	Rechange
		Power		Power	
		Mute		Mute	
		Pic Size		Format	
		Pic Mode		Shift + Format	
		Sleep		Sleep	
		Dual I-II		Dual	
		S.Mode		Shift + Dual	
		Still		Pause	
		1		1	
		2		2	
		3		3	
		4		4	
		5		5	
		6		6	
		7		7	
		8		8	
		9		9	
		0		0	
		-/--		Guide	
		PRE-CH		Pre Ch	
		S.Swap		I<<	
		PIP		Options	
		P.Input		>>	
		P.Position		>>I	
		P.Size		Subt	
		P.Swap		<<	
		TV		TV/R	
		PC/HDMI		Media	
		AV/Sel		Smart	
		Source		AV	
		Menu		Menu	
		Exit		Exit	
		TTX/On		Text	
		Mix		Shift + Text	





Original	Recharge
 Up	 Up
 PR+	 Ch +
 Down	 Down
 PR-	 Ch -
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -
 Enter	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Store	 Shift + Smart
 Frof/List	 List
 Hold	 Stop
 Cancel	 Back

Original	Recharge
 Index	 Info
 Time	 Shift + AV
 Size	 Eject
 Reveal	 D. Menu

