








 

 

 
 
 
 


 
 
 

 

 
 
 
 

 
 

 


 

 
 



 


 



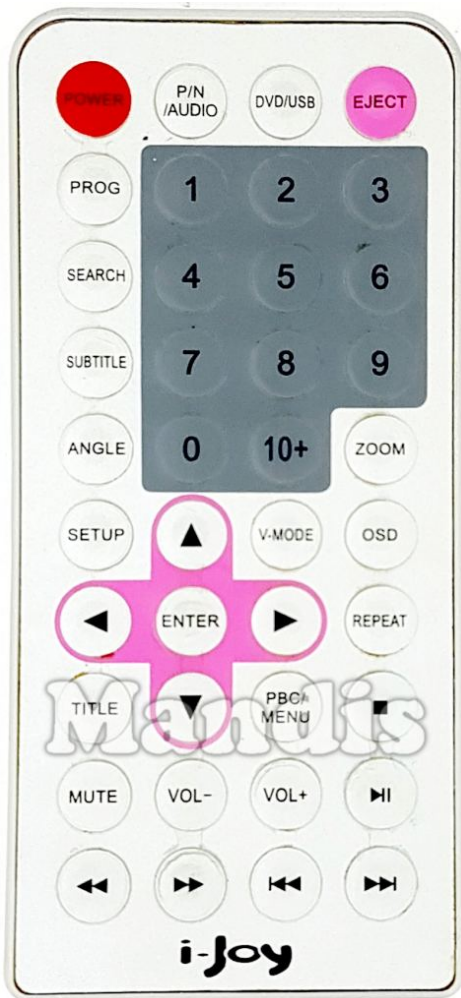 




| | Original | Rechange | | Original | Rechange |
|---|----------|---|---------------|---|----------|
|  | Power |  | Power |  | 9 |
|  | PN/Audio |  | Dual |  | 0 |
|  | DVD/USB |  | Smart |  | 10+ |
|  | Eject |  | Eject |  | Setup |
|  | Prog |  | Sleep |  | V-Mode |
|  | Search |  | TV/R |  | OSD |
|  | Subtitle |  | Subt |  | Repeat |
|  | Angle |  | Back |  | Title |
|  | Zoom |  | Shift + Eject |  | PBC/Menu |
|  | 1 |  | 1 |  | Up |
|  | 2 |  | 2 |  | Down |
|  | 3 |  | 3 |  | Right |
|  | 4 |  | 4 |  | Left |
|  | 5 |  | 5 |  | Enter |
|  | 6 |  | 6 |  | Stop |
|  | 7 |  | 7 |  | Play |
|  | 8 |  | 8 |  | Pause |





| | Original | Rechange | Original | Rechange |
|---|----------|---|----------|----------|
|  | >> |  | >> | |
|  | <<< |  | <<< | |
|  | >> |  | >> | |
|  | <<< |  | <<< | |
|  | Vol+ |  | Vol + | |
|  | Vol- |  | Vol - | |
|  | Mute |  | Mute | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

