

 



 

 

 


 



 

 



 



 



 






 
 

 

 
 


 



 

 





 


 


 



Original		Rechange		Original		Rechange	
	System Standby		Power		Left		Left
	Muting		Mute / Dimmer		Enter		OK
	Play		Play / Slow		Right		Right
	Pause		Pause / Step / Freeze		Down		Down
	Stop		Stop / Hold		Recall		Back / Return
	<<		<< / Tune-		Master Vol+		Vol+
	>>		>> / Tune+		Multi CH		Smart / List
	I<</CH Preset-Tuner		I<< / Preset-		Tv CH+		CH+ / Page+
	>>/CH Preset+ Tuner		>> / Preset+		Master Vol-		Vol-
	Sound Field Mode		Sound / Title		Tv CH-		CH- / Page-
	Sound Field		Audio / Lang I/II		1 Tuner		1
	Sleep		Sleep / Timer		2 Tuner		2
	Tv/Video/ANT		TV/Radio /		CD		3
	DVD Menu		D.Menu / Top		4 Tuner		4
	Standby AV		AV / Input / RDS		5 Tuner		5
	Main Menu		Menu / Home		Tuner		6
	Up		Up		7 Tuner		7





Original	Recharge	Original	Recharge
 8 Tuner	 8	 Tv Vol-	 Shift + Vol-
 9 Tuner	 9	 DVD/LD	 Shift + 2
 0 Tuner	 0	 3 Tuner	 Shift + 3
 -	 Fav / Marker / PC	 MD/Tape	 Shift + 5
 Video1	 Red / Netflix / Search	 6 Tuner	 Shift + 6
 Video 2	 Green / APP / Repeat	 >10 Tuner/Shift/-/	 Shift + 0
 <</CH/Preset-	 Shift + << / Preset-		
 >> /CH/Preset+	 Shift + >> / Preset+		
 Sound Field	 Shift + Sound / Title		
 Test Tone	 Shift + Audio / Lang I/II		
 D.Skip/TV/VTR	 Shift + TV/Radio / Program		
 Top Menu	 Shift + D.Menu / Top Menu		
 +	 Shift + Up		
 < Menu	 Shift + Left		
 Enter/D.Tuning/Return Tuner	 Shift + OK		
 Menu >	 Shift + Right		
 Tv Vol+	 Shift + Vol+		

Original	Recharge	Original	Recharge
 Tv Vol-	 Shift + Vol-	 DVD/LD	 Shift + 2
 3 Tuner	 Shift + 3	 MD/Tape	 Shift + 5
 6 Tuner	 Shift + 6	 >10 Tuner/Shift/-/	 Shift + 0





Original	Recharge
 Standby	 Power
 Video 1	 Shift + 1
 Video 2	 Shift + 2
 DVD/LD	 TV/Radio /
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Shift + 0

Original	Recharge
 0	 0
 Enter/D.Tuning/Return	 OK
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 D.Menu / Top
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original		Recharge		Original		Recharge	
	Standby CD		Power		5 Video 1		Shift + 5
	Standby Video		Shift + Power		6 CD		Shift + 6
	Video 1		Shift + Smart / List		6 Video 1		6
	Video 2		Shift + Display / Media		7 CD		7
	DVD/LD		Shift + 2		7 Video 1		Shift + 7
	MD/Tape		Shift + D.Menu / Top Menu		8 CD		Shift + 8
	CD		TV/Radio /		8 Video 1		8
	Tuner		Text / Goto		9 CD		Shift + 9
	1 CD		Shift + 1		9 Video 1		9
	1 Video 1		1		>10/Shift/-/- CD		Fav / Marker / PC
	2 CD		Smart / List		>10/Shift/-/- Video 1		Shift + 0
	2 Video 1		2		0 CD		Guide / EPG / -/-
	3 CD		Shift + 3		0 Video 1		0
	3 Video 1		3		Enter/D.Tuning/Return CD		Display / Media
	4 CD		4		Enter/D.Tuning/Return Video 1		OK
	4 Video 1		Shift + 4		I<< CD		I<< / Preset-
	5 CD		5		I<< Video 1		Shift + I<< / Preset-

 



 


 

 

 

 

 
 

 
 


 



 


 


 

 

 
 





 

 

 

 

 
 







Original	Recharge	Original	Recharge
 >>I CD	 >>I / Preset+		
 >>I Video 1	 +  Shift + >>I / Preset+		
 <<< CD	 <<< / Tune-		
 <<< Video 1	 +  Shift + <<< /		
 >>> CD	 >>> / Tune+		
 >>> Video 1	 +  Shift + >>> /		
 D.Skip/TV/VTR CD	 D.Menu / Top		
 D.Skip/TV/VTR Video 1	 Setup / OPT /		
 Play CD	 Play / Slow		
 Play Video 1	 +  Shift + Play /		
 Pause CD	 Pause / Step / Freeze		
 Pause Video 1	 +  Shift + Pause / Step /		
 Stop CD	 Stop / Hold		
 Stop Video 1	 +  Shift + Stop /		
 Muting	 Mute / Dimmer		
 Master Vol+	 Vol+		
 Master Vol-	 Vol-		





Original		Recharge		Original		Recharge	
	Standby		Power		5 Video 2		5
	Standby Video		Shift + Power		6 MD/Tape		6
	Video 1		Shift + 1		6 Video 2		Shift + 6
	Video 2		Shift + 2		7 MD/Tape		7
	DVD/LD		Display / Media		7 Video 2		Shift + 7
	MD/Tape		Smart / List		8 MD/Tape		Shift + 8
	CD		Setup / OPT /		8 Video 2		8
	Tuner		TV/Radio /		9 MD/Tape		Shift + 9
	1 MD/Tape		Shift + Smart / List		9 Video 2		9
	1 Video 2		1		>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	2 MD/Tape		Shift + Display / Media		>10/Shift/-/- Video 2		Shift + 0
	2 Video 2		2		0 MD/Tape		Fav / Marker / PC
	3 MD/Tape		Shift + 3		0 Video 2		0
	3 Video 2		3		Enter/D.Tuning/Return MD/Tape		Shift + OK
	4 MD/Tape		4		Enter/D.Tuning/Return Video 2		OK
	4 Video 2		Shift + 4		I<< MD/Tape		I<< / Preset-
	5 MD/Tape		Shift + 5		I<< Video 2		Shift + I<< / Preset-





Original	Recharge	Original	Recharge
>> MD/Tape	>> / Preset+		
>> Video 2	+ Shift + >> / Preset+		
<<< MD/Tape	<<< / Tune-		
<<< Video 2	+ Shift + <<< /		
>>> MD/Tape	>>> / Tune+		
>>> Video 2	+ Shift + >>> /		
D.Skip/TV/VTR MD/Tape	D.Menu / Top		
D.Skip/TV/VTR Video 2	+ Shift + D.Menu / Top Menu		
Play MD/Tape	Play / Slow		
Play Video 2	+ Shift + Play /		
Pause MD/Tape	Pause / Step / Freeze		
Pause Video 2	+ Shift + Pause / Step /		
Stop MD/Tape	Stop / Hold		
Stop Video 2	+ Shift + Stop /		
Muting	Mute / Dimmer		
Master Vol+	Vol+		
Master Vol-	Vol-		

