


 
 




 

 
 


 
 

 






 

 

 

 








Original		Rechange		Original		Rechange	
	Power		Power		Green		Green
	Input TV		AV		Yellow		Yellow
	Input AV		Shift + AV		Blue		Blue
	(<>)		Shift + Dual		Text		Text
	Viera Link		Dual		Index		Shift + Info
	Option		Options		Hold		Shift + Text
	Direct TV Rec		TV/R		1		1
	Aspect		Format		2		2
	Exit		Exit		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		Ok		6		6
	Right		Right		7		7
	Down		Down		8		8
	Menu		Menu		9		9
	Return		Back		0 / VCR		0
	Red		Red		i		Info





Original	Rechange
Mute	Mute
CH +	Ch +
CH -	Ch -
Vol +	Vol +
Vol -	Vol -
VCR Power	Smart
DVD Power	Media
DVD Rec	Rec
VCR Rec	Shift + Rec
DVD	Shift + Ch -
VCR	Shift + Down
DVD	Shift + Ch +
VCR	Shift + Up
DVD I<<<	I<<<
DVD <<<	<<<
VCR <<<	Shift + <<<
VCR I<<<	Shift + I<<<

Original	Rechange
DVD >>>I	>>>I
DVD >>	>>
VCR >>	Shift + >>
VCR >>>I	Shift + >>>I
DVD Stop	Stop
VCR Stop	Shift + Stop
DVD Pause/Step	Pause
VCR Pause / Step	Shift + Pause
DVD Play	Play
VCR Play	Shift + Play

