




 









 
















 




 
 
 



 
 




 

 


 






 
 
 

 






Original	Rechange	Original	Rechange
 Power	 Power	 SAT	 Smart
 Mute	 Mute	 Up / CH +	 Up
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Down
 3	 3	 Down / CH -	 Ch -
 4	 4	 Right / Vol +	 Right
 5	 5	 Right / Vol +	 Vol +
 6	 6	 Left / Vol -	 Left
 7	 7	 Left / Vol -	 Vol -
 8	 8	 OK	 Ok
 9	 9	 Exit	 Exit
 0	 0	 FAV	 Pre Ch
 Info / ↑	 Info	 Lang	 Dual
 Info / ↑	 >>I	 Pause	 Pause
 Pre / ↓	 I<<	 TV / AV	 AV
 Pre / ↓	 Back	 TV / Rad	 TV/R
 Menu	 Menu	 Red / TXT	 Red





Original	Recharge
 Red / TXT	 Text
 Blue / Audio	 Blue
 Blue / Audio	 +  Shift + Dual
 Green / PIG	 Green
 Yellow / EPG	 Yellow
 Yellow / EPG	 Guide

Original	Recharge

