




 






Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Nicam	 Smart

Original	Recharge
 DVB Menu	 Media
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 AV/Tv	 AV
 EPG	 Guide
 SUBT	 Subt
 i/Info	 Info
 [≡]/Text	 Text
 [≡+]/Hold	 Dual
 [▼]/PGDN	 <<





	Original	Recharge		
PGUP	[▲]PGUP		>>	
INDEX	[≡i]/Index		Exit	
SIZE	[≡♦]/Size		Format	
REVEAL	[≡?]/Reveal		TV/R	
SUBPAGE	[≡o]/Subpage		D. Menu	
RED	Red		Red	
GREEN	Green		Green	
YELLOW	Yellow		Yellow	
CYAN	Cyan		Blue	
SLEEP	Sleep		Sleep	
FAV	FAV	+	Shift + Pre Ch	
LAST	Last		Eject	
P-MODE	P-Mode		3D	

	Original	Recharge		

