



 








 











 





 





 


















	Original	Rechange		Original	Rechange
	Power		Power		Pause / Step
	Open / Close		Eject		Play
	1		1		Stop
	2		2		Home
	3		3		Menu / List
	4		4		Up / PR/CH +
	5		5		Up / PR/CH +
	6		6		Down / PR/CH -
	7		7		Down / PR/CH -
	8		8		Left
	9		9		Enter
	0		0		Right
	AV / Input		AV		Display
	<< Scan		<<		Return
	Scan >>		>>		Audio
	I<< Skip		I<<		Subtitle
	Skip >>I		>>I		Zoom
					Shift + Eject



