












 

 

 





 
 
 



 










 



 

 

 
 

 

 
 
 
 
 

 












| Original   | Recharge  | Original  | Recharge  |
|--|---|---|---|
|  Standby / On |  Power           |  Vol +         |  Vol +           |
|  Function     |  AV              |  Vol -         |  Vol -           |
|  Open / Close |  Eject           |  Mute          |  Mute            |
|  Karaoke      |  TV/R            |  Top Menu      |  Shift + Menu    |
|  Key / Echo   |  Guide           |  Menu / PopUp  |  Menu            |
|  NET Contents |  Media           |  Home Menu     |  Smart           |
|  YouTube      |  Shift + Media   |  Up            |  Up              |
|  Sleep        |  Sleep           |  Left          |  Left            |
|  Exit         |  Exit            |  Return        |  Back            |
|  Mic Vol +   |  Ch +           |  Enter        |  Ok             |
|  Mic Vol -  |  Ch -          |  Right       |  Right         |
|  Home Media |  Shift + Smart |  Down        |  Down          |
|  Dimmer     |  Shift + Mute  |  Resolution  |  Format        |
|  CD / SACD  |  D. Menu       |  Replay      |  Shift + Play  |
|  Display    |  Info          |  Continued   |  List          |
|  USB REC    |  Rec           |  Tools       |  Options       |
|  Sound      |  Shift + Dual  |  Skip Search |  Shift + Right |





| Original       | Recharge |
|----------------|----------|
| << REV         | <<       |
| Play           | Play     |
| >> FWD         | >>       |
| I<< / <   / <  | I<<      |
| Pause          |          |
| Stop           | ■        |
| >>  /  > /   > | >>       |
| 1              | 1        |
| 2              | 2        |
| 3              | 3        |
| 4              | 4        |
| 5              | 5        |
| 6              | 6        |
| 7              | 7        |
| 8              | 8        |
| 9              | 9        |
| 0              | 0        |

| Original               | Recharge       |
|------------------------|----------------|
| Clear                  | Shift + Exit   |
| Repeat                 | Text           |
| Subtitle               | Subt           |
| Angle                  | Shift + Format |
| Virtual 3D Sound       | 3D             |
| A-B                    | Shift + Text   |
| Program / Red          | Red            |
| Program / Red          | Shift + Sleep  |
| RDS / Bookmark / Green | Green          |
| Audio                  | Dual           |
| RDS / Bookmark / Green | Pre Ch         |
| PTY / Zoom /           | Yellow         |
| PTY / Zoom /           | Shift + Eject  |
| Index / Blue           | Blue           |
|                        |                |
|                        |                |
|                        |                |

