

 

 
 
 
 
 
 
 
 
 

 

 

 
 

 
 
 

 

 











Original		Rechange		Original		Rechange	
	Power		Power		Blue		Blue
	Mute		Mute		Source		AV
	1		1		CH +		Ch +
	2		2		CH -		Ch -
	3		3		Vol +		Vol +
	4		4		Vol -		Vol -
	5		5		Info / Display		Info
	6		6		P.Mode	 + 	Shift + Format
	7		7		S.Mode	 + 	Shift + Dual
	8		8		Auto		Media
	9		9		Sleep		Sleep
	0		0		Up		Up
	Recall		Back		Left		Left
	List		List		OK / Enter		Ok
	Red		Red		Right		Right
	Green		Green		Down		Down
	Yellow		Yellow		Menu		Menu





Original	Recharge	Original	Recharge
 Exit	 Exit	 I<<	 I<<
 Aspect	 Format		
 TTX	 Text		
 Index	 Options		
 Audio I/II	 Dual		
 Rec / Mix	 Rec		
 Repeat / Subpage	 Shift + Text		
 Hold	 Shift + Stop		
 Subtitle	 Subt		
<< / Cancel button icon" data-bbox="228 591 261 631"/> << / Cancel	 <<		
 Stop / Reveal	 Stop		
 Play/Pause / Size	 Play		
 Play/Pause / Size	 Pause		
 >>I / FAV	 >>I		
 >> / TV/Radio	 >>		
 >>I / FAV	 Pre Ch		
 >> / TV/Radio	 TV/R		

