














Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Original	Recharge
 Green / Stop	 Stop / Hold
 Green / Stop	 Green / APP / Repeat
 Yellow / Play / Slow	 Play / Slow
 Yellow / Play / Slow	 Yellow / YouTube / Repeat
 Blue / Aspect / Picture	 Picture / Format
 Blue / Aspect / Prime Video / Random	 Blue / Prime Video / Random
 Blue / Aspect / Tune+	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original	Rechange
 TV / Radio	 TV/Radio /
 Vol -	 Vol-
 Prog -	 CH- / Page-
 Menu	 Menu / Home
 Vol +	 Vol+
 TXT / Mix	 Text / Goto
 Still	 Pause / Step / Freeze
 PIP	 D.Menu / Top
 Sound	 Sound / Title
 SAT1	 Shift + 2
 SAT2	 Shift + 3
 TV	 Shift + 1
 Sleep	 Sleep / Timer

Original	Rechange





Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Original	Recharge
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 >> / Tune+
 Blue / >> /	 Picture / Format
 Blue / >> /	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original	Rechange
TV / Radio	TV/Radio /
Vol -	Vol-
Prog -	CH- / Page-
Menu	Menu / Home
Vol +	Vol+
TXT / Mix	Text / Goto
Still	Pause / Step / Freeze
PIP	D.Menu / Top
Sound	Sound / Title
SAT1	Shift + 2
SAT2	Shift + 3
TV	Shift + 1
Sleep	Sleep / Timer

Original	Rechange





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-

Original	Rechange
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 Blue / Prime Video / Random
 Blue / >> /	 Picture / Format
 Blue / >> /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+




Original
Rechange

	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

Original
Rechange

