



| Original | Recharge |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  REC |  Rec / Rec Mode |
|  0 / AV |  0 |
|  0 / AV |  AV / Input / RDS |
|  OPT |  Setup / OPT / |
|  Red / << |  << / Tune- |
|  Red / << |  Red / Netflix / Search |

| Original | Recharge |
|--|---|
|  Green / Stop |  Stop / Hold |
|  Green / Stop |  Green / APP / Repeat |
|  Yellow / Play / Slow |  Play / Slow |
|  Yellow / Play / Slow |  Yellow / YouTube / Repeat |
|  Blue / Aspect / Picture |  Picture / Format |
|  Blue / Aspect / Prime Video / Random |  Blue / Prime Video / Random |
|  Blue / Aspect / Tune+ |  >> / Tune+ |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI / EPG |  Guide / EPG / -/- |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Exit / Recall |  Back / Return |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |





| Original | Recharge |
|------------|-------------------------------------|
| TV / RADIO | PROGRAM TV/RADIO TV/Radio / |
| Vol - | VOL - Vol- |
| Prog - | CH PAGE CH- / Page- |
| Menu | HOME MENU Menu / Home |
| Vol + | VOL + Vol+ |
| TXT / Mix | GOTO TEXT Text / Goto |
| Still | STEP - FREEZE Pause / Step / Freeze |
| PIP | TOP MENU D.MENU D.Menu / Top |
| Sound | TITLE SOUND Sound / Title |
| SAT1 | SHIFT + DVD 2 Shift + 2 |
| SAT2 | SHIFT + CD - STB 3 Shift + 3 |
| TV | SHIFT + TV 1 Shift + 1 |
| Sleep | TIMER SLEEP Sleep / Timer |
| | |
| | |
| | |
| | |
| | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |















| Original | Recharge |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  REC |  Rec / Rec Mode |
|  0 / AV |  AV / Input / RDS |
|  0 / AV |  0 |
|  OPT |  Setup / OPT / |
|  Red / << |  << / Tune- |
|  Red / << |  Red / Netflix / Search |

| Original | Recharge |
|---|---|
|  Green / Stop |  Green / APP / Repeat |
|  Green / Stop |  Stop / Hold |
|  Yellow / |  Play / Slow |
|  Yellow / |  Yellow / YouTube / Repeat |
|  Blue / >> / |  >> / Tune+ |
|  Blue / >> / |  Picture / Format |
|  Blue / >> / |  Blue / Prime Video / Random |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI / EPG |  Guide / EPG / -/- |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Exit / Recall |  Back / Return |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |





| Original | Rechange |
|--|---|
|  TV / Radio |  TV/Radio / |
|  Vol - |  Vol- |
|  Prog - |  CH- / Page- |
|  Menu |  Menu / Home |
|  Vol + |  Vol+ |
|  TXT / Mix |  Text / Goto |
|  Still |  Pause / Step / Freeze |
|  PIP |  D.Menu / Top |
|  Sound |  Sound / Title |
|  SAT1 |  Shift + 2 |
|  SAT2 |  Shift + 3 |
|  TV |  Shift + 1 |
|  Sleep |  Sleep / Timer |
| | |
| | |
| | |
| | |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Rechange |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  REC |  Rec / Rec Mode |
|  0 / AV |  AV / Input / RDS |
|  0 / AV |  0 |
|  OPT |  Setup / OPT / |
|  Red / << |  Red / Netflix / Search |
|  Red / << |  << / Tune- |

| Original | Rechange |
|---|---|
|  Green / Stop |  Green / APP / Repeat |
|  Green / Stop |  Stop / Hold |
|  Yellow / |  Play / Slow |
|  Yellow / |  Yellow / YouTube / Repeat |
|  Blue / >> / |  Blue / Prime Video / Random |
|  Blue / >> / |  Picture / Format |
|  Blue / >> / |  >> / Tune+ |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI / EPG |  Guide / EPG / -/- |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Exit / Recall |  Back / Return |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |





| Original | | Rechange | |
|----------|------------|----------|-----------------------|
| | TV / Radio | | TV/Radio / |
| | Vol - | | Vol- |
| | Prog - | | CH- / Page- |
| | Menu | | Menu / Home |
| | Vol + | | Vol+ |
| | TXT / Mix | | Text / Goto |
| | Still | | Pause / Step / Freeze |
| | PIP | | D.Menu / Top |
| | Sound | | Sound / Title |
| | SAT1 | | Shift + 2 |
| | SAT2 | | Shift + 3 |
| | TV | | Shift + 1 |
| | Sleep | | Sleep / Timer |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Rechange | |
|----------|--|----------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

