 




 


 



 







 
 

 

 
 

 



 
 

 
 

 
 

 


 


 





 





 
 


 








Original		Rechange		Original		Rechange	
	Power		Power		Vol +		Vol +
	[≡]		Text		Vol -		Vol -
	16:9		Format		P +		Ch +
	Mute		Mute		P -		Ch -
	Red		Red		1		1
	Green		Green		2		2
	Yellow		Yellow		3		3
	Blue		Blue		4		4
	Digital		Smart		5		5
	Up		Up		6		6
	Left		Left		7		7
	OK		Ok		8		8
	Right		Right		9		9
	Down		Down		0		0
	TV		TV/R		Recall		Pre Ch
	Exit		Exit		CH Guide		Guide
	Menu		Menu		[≡i] / Help		Options





	Original	Recharge	Original	Recharge
	[....]	 Subt		
	[≡□] / [▶ ◀]	 Stop		
	Input	 AV		
	[≡?] / ((↔))	 Media		
	[≡X] / ⊖	 Shift +  Exit		
	[≡⇕] / Info	 Info		
	Lang I-II	 Dual		





Original		Rechange	
	Power		Power
	Viewlink VCR REC		Rec
	Play		Play
	<<		<<
	Pause		Pause
	>>		>>
	Stop		Stop
	TV		Smart
	Menu		Menu
	P +		Ch +
	P -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Original		Rechange	
	7		7
	8		8
	9		9
	0		0
	Input		AV
	Lang I-II		Dual

