








 


 



 
 

 


 


 

 

 

 
 


 

 



 
 



 


 





	Original	Rechange	Original	Rechange
	Power			7
	Eject			8
	Menu/No			9
	Yes			10/0
	Clear			>10
	Display			Music Sync
	Scroll			Stop CD-Sync
	Fader			Start CD-Sync
	Name			Standby
	Char			Pause CD
	Play Mode			I<< CD Player
	1			>>I CD Player
	2			Play
	3			Pause
	4			Rec
	5			T-Rec
	6			Stop



