



| Original | Rechange |
|---|--|
|  On / Off |  Power |
|  Mute All |  Audio / Lang I/II |
|  Mute |  Mute / Dimmer |
|  CD-DVD |  Shift + 3 |
|  FM-AM |  Shift + 6 |
|  AUX |  Shift + 7 |
|  TV |  Shift + 1 |
|  CBL-SAT |  Shift + 0 |
|  VCR |  Shift + 4 |
|  Up / Tune + |  Up |
|  DVD Menu |  D.Menu / Top |
|  Settings |  Setup / OPT / |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Guide |  Guide / EPG / -/-- |
|  System |  Menu / Home |

| Original | Rechange |
|---|---|
|  Down / Tune - |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Track/Chap./CH + |  CH+ / Page+ |
|  Volume + |  Vol+ |
|  Track/Chap./CH - |  CH- / Page- |
|  Volume - |  Vol- |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  I<< / Seek - |  I<< / Preset- |
|  I<< / Seek - |  << / Tune- |
|  >>I / Seek + |  >> / Tune+ |
|  >>I / Seek + |  >>I / Preset+ |
|  Shuffle / Presets <-- |  Red / Netflix / Search |
|  Repeat / Presets --> |  Blue / Prime Video / Random |
|  1 |  1 |
|  2 |  2 |



