



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
EPG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Original	Rechange
Display	Display / Media
TV / Radio	TV/Radio /
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol+	Vol+
Auto	Eject / Surround
CH+	CH+ / Page+
Vol-	Vol-
Aspect	Zoom / Size
CH-	CH- / Page-
Source	AV / Input / RDS





Original	Recharge	Original	Recharge
P.Mode	Picture / Format	Red	Red / Netflix / Search
S.Mode	Sound / Title	Green	Green / APP / Repeat
Sleep	Sleep / Timer	Yellow	Yellow / YouTube / Repeat
Play/Pause / Text	Play / Slow	Blue	Blue / Prime Video / Random
Play/Pause / Text	Pause / Step / Freeze		
Play/Pause / Text	Text / Goto		
Stop / Index	Stop / Hold		
Mix	Smart / List		
Reveal	Setup / OPT /		
<< / Hold	<< / Tune-		
>> / Subpage	>> / Tune+		
I<< / Size	I<< / Preset-		
>>I / Cancel	>>I / Preset+		
TimeShift	D.Menu / Top		
Rec	Rec / Rec Mode		
FAV-	Shift + CH- /		
FAV+	Shift + CH+ /		

Original	Recharge
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

