



Original		Rechange		Original		Rechange	
	Power		Power		F1 / Find		D.Menu / Top
	Mute		Mute / Dimmer		F2 / Zoom		Zoom / Size
	Red		Red / Netflix / Search		F2 / Zoom		Setup / OPT /
	Green / Aspect		Green / APP / Repeat		F3 / TXT		Smart / List
	Green / Aspect		Picture / Format		F3 / TXT		Text / Goto
	Yellow		Yellow / YouTube / Repeat		F4		Display / Media
	Blue / SUBT		Subtitle / EQ		Menu		Menu / Home
	Blue / SUBT		Blue / Prime Video / Random		Up / CH+		Up
	<<		<< / Tune-		Info		Info / Angle
	>>		>> / Tune+		Left / Vol-		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right / Vol+		Right
	USB		Shift + 8		FAV		Fav / Marker / PC
	Play / Pause		Play / Slow		Down / CH-		Down
	Play / Pause		Pause / Step / Freeze		Exit		Exit / Cancel / Clear
	Stop		Stop / Hold		Vol+		Vol+
	Rec		Rec / Rec Mode		EPG		Guide / EPG / -/-





Original	Rechange	Original	Rechange
 Power	 Power	 F1 / Find	 D.Menu / Top
 Mute	 Mute / Dimmer	 F2 / Zoom	 Setup / OPT /
 Red	 Red / Netflix / Search	 F2 / Zoom	 Zoom / Size
 Green / Aspect	 Picture / Format	 F3 / TXT	 Text / Goto
 Green / Aspect	 Green / APP / Repeat	 F3 / TXT	 Smart / List
 Yellow	 Yellow / YouTube / Repeat	 F4	 Display / Media
 Blue / SUBT	 Subtitle / EQ	 Menu	 Menu / Home
 Blue / SUBT	 Blue / Prime Video / Random	 Up / CH+	 Up
 <<	 << / Tune-	 Info	 Info / Angle
 >>	 >> / Tune+	 Left / Vol-	 Left
 I<<	 I<< / Preset-	 OK	 OK
 >>I	 >>I / Preset+	 Right / Vol+	 Right
 USB	 Shift + 8	 FAV	 Fav / Marker / PC
 Play / Pause	 Play / Slow	 Down / CH-	 Down
 Play / Pause	 Pause / Step / Freeze	 Exit	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 Vol+	 Vol+
 Rec	 Rec / Rec Mode	 EPG	 Guide / EPG / -/-



