


 













 






 

 

 





 










 



 
 





















Original		Recharge		Original		Recharge	
	Power		Power		CD Disc Skip		Shift + 3
	Time/Level		Shift + Sleep / Timer		CD <<<		Shift + <<< /
	DSP PRG+		CH+ / Page+		CD ▶		Play / Slow
	Set Menu		Menu / Home		CD ■■		Shift + >>> /
	DSP-		Shift + CH- /		CD <<<		<<< / Tune-
	DSP+		Shift + CH+ /		CD ■ / ■■		Stop / Hold
	Test		Text / Goto		CD ▶▶		>>> / Tune+
	DSP PRG-		CH- / Page-		TUNER Preset-		I<<< / Preset-
	Effect		Picture / Format		TUNER Preset+		>>>I / Preset+
	TAPE ● / ■■		Rec / Rec Mode		TUNER		Shift + 6
	TAPE Deck A/B		Green / APP / Repeat		CD		3
	TAPE <<<		Sound / Title		Tuner		6
	TAPE ▶		Shift + Play /		TAPE/MD		5
	TAPE ▶▶		Audio / Lang I/II		DVD/LD		2
	TAPE DIR A		Yellow / YouTube / Repeat		SAT/D-TV		Eject / Surround
	TAPE ■		Shift + Stop /		VCR		4
	TAPE DIR B		Shift + Yellow / YouTube / Repeat		AUX		7



