



Original	Recharge	Original	Recharge
 Power	 Power	 I<<	 I<<
 Mute	 Mute	 >>I	 >>I
 Red	 Red	 Menu	 Menu
 Green	 Green	 FAV	 Pre Ch
 Yellow	 Yellow	 Up / PR+	 Up
 Blue	 Blue	 Down / PR-	 Down
 Text	 Text	 Right / Vol+	 Right
 Zoom	 Eject	 Left / Vol-	 Left
 Subt	 Subt	 OK / List	 Ok
 Audio	 Dual	 OK / List	 List
 Rec	 Rec	 Exit	 Exit
 --	 Shift + Guide	 EPG	 Guide
 Stop	 Stop	 Vol+	 Vol +
 Play / Pause	 Play	 Vol-	 Vol -
 Play / Pause	 Pause	 Info	 Info
 <<	 <<	 Media	 Media
 >>	 >>	 Page+	 Ch +





Original		Recharge	
<b>PAGE</b> -	Page-	<b>CH</b> -	Ch -
<b>1</b>	1	<b>1</b>	1
<b>2</b>	2	<b>2</b>	2
<b>3</b>	3	<b>3</b>	3
<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>RECALL</b>	Recall	<b>RETURN BACK</b>	Back
<b>TV/RADIO</b>	TV / Radio	<b>SEARCH TV/R</b>	TV/R

Original		Recharge	

