



Original	Recharge
Power	Power
Input	AV / Input / RDS
Open	Eject / Surround
Netflix	Shift + Red / Netflix /
VUDU	Shift + Smart / List
Pure Audio	Shift + Audio / Lang I/II
Vol-	Vol-
Vol+	Vol+
Mute	Mute / Dimmer
1	1
2	2
3	3
Home	Menu / Home
4	4
5	5
6	6
Page+	CH+ / Page+

Original	Recharge
7	7
8	8
9	9
Page-	CH- / Page-
Clear	Exit / Cancel / Clear
0	0
Goto	Text / Goto
Info	Info / Angle
Top Menu	D.Menu / Top
Up	Up
Pop-Up Menu	Smart / List
Left	Left
Enter	OK
Right	Right
Option	Shift + Setup / OPT / Tools
Down	Down
Return	Back / Return





Original	Rechange
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Blue	Blue / Prime Video / Random
Yellow	Yellow / YouTube / Repeat
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>	>>  / Preset+
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Dimmer	+  Shift + Mute / Dimmer
Setup	Setup / OPT /
AB Repeat	+  Shift + Yellow / YouTube / Repeat

Original	Rechange
Repeat	+  Shift + Green / APP /
Darbee	Display / Media
Resolution	+  Shift + Display / Media
Light	Picture / Format

