













 



 











 
 
 

 




 
 


 






 

 



















Original		Rechange		Original		Rechange	
	Power		Power		S-Mode		Sound / Title
	Source		AV / Input / RDS		Nicam / Audio		Audio / Lang I/II
	Sleep		Sleep / Timer		Up		Up
	Mute		Mute / Dimmer		Left		Left
	1		1		Enter		OK
	2		2		Right		Right
	3		3		Down		Down
	4		4		Red / Program		Red / Netflix / Search
	5		5		Red / Program		TV/Radio /
	6		6		Green / Goto		Green / APP / Repeat
	7		7		Yellow / Angle		Yellow / YouTube / Repeat
	8		8		Blue / USB/Card		Blue / Prime Video / Random
	9		9		Subtitle		Subtitle / EQ
	0		0		Info		Info / Angle
	- / - / +10		Guide / EPG / +/-		Menu / Exit		Menu / Home
	Recall		Back / Return		Menu / Exit		Exit / Cancel / Clear
	P-Mode		Picture / Format		+ / FAV+		Vol+



