
























| Original   | Rechange  |
|--|---|
|  Standby          |  Power                   |
|  Auto / Eject     |  Eject / Surround        |
|  Mute             |  Mute / Dimmer           |
|  P.Mode           |  Picture / Format        |
|  S.Mode           |  Sound / Title           |
|  Info             |  Info / Angle            |
|  Nicam            |  Audio / Lang I/II       |
|  1                |  1                       |
|  2                |  2                       |
|  3                |  3                       |
|  Menu             |  Menu / Home             |
|  4              |  4                     |
|  5              |  5                     |
|  6              |  6                     |
|  Exit / D.Setup |  Setup / OPT /         |
|  Exit / D.Setup |  Exit / Cancel / Clear |
|  7              |  7                     |

| Original  | Rechange  |
|---|---|
|  8             |  8                     |
|  9             |  9                     |
|  Input         |  AV / Input / RDS      |
|  0             |  0                     |
|  Recall        |  Back / Return         |
|  Sleep         |  Sleep / Timer         |
|  Up            |  Up                    |
|  Left          |  Left                  |
|  Enter         |  OK                    |
|  Right         |  Right                 |
|  Down          |  Down                  |
|  CH-         |  CH- / Page-         |
|  CH+         |  CH+ / Page+         |
|  Vol-        |  Vol-                |
|  Vol+        |  Vol+                |
|  Text / Slow |  Text / Goto         |
|  Text / Slow |  Shift + Play / Slow |





| Original |                   | Recharge |                       | Original |              | Recharge |                             |
|----------|-------------------|----------|-----------------------|----------|--------------|----------|-----------------------------|
|          | Hold / Play/Pause |          | Play / Slow           |          | FAV+ / Goto  | +        | Shift + Up                  |
|          | Hold / Play/Pause | +        | Shift + Stop /        |          | FAV+ / Goto  | +        | Shift + Text /              |
|          | Hold / Play/Pause |          | Pause / Step / Freeze |          | Red / D.Prog |          | TV/Radio /                  |
|          | Page+ / Stop      |          | Stop / Hold           |          | Red / D.Prog |          | Red / Netflix / Search      |
|          | Page+ / Stop      | +        | Shift + CH+ /         |          | Green / Step | +        | Shift + Pause / Step /      |
|          | Page- / Zoom      |          | Zoom / Size           |          | Green / Step |          | Green / APP / Repeat        |
|          | Page- / Zoom      | +        | Shift + CH- /         |          | Yellow / RPT | +        | Shift + Green / APP /       |
|          | [≡i] / I<<        |          | I<< / Preset-         |          | Yellow / RPT |          | Yellow / YouTube / Repeat   |
|          | [≡□] / >>I        |          | >>I / Preset+         |          | Blue / A-B   | +        | Shift + Yellow / YouTube /  |
|          | [≡?] / <<         |          | << / Tune-            |          | Blue / A-B   |          | Blue / Prime Video / Random |
|          | [≡●] / >>         |          | >> / Tune+            |          | List / Angle | +        | Shift + Info / Angle        |
|          | EPG / D.Menu      |          | D.Menu / Top          |          | List / Angle |          | Smart / List                |
|          | EPG / D.Menu      |          | Guide / EPG / -/-     |          | SUB-T        |          | Subtitle / EQ               |
|          | FAV / D.Title     | +        | Shift + Sound / Title |          | Aspect       | +        | Shift + Picture / Format    |
|          | FAV / D.Title     |          | Fav / Marker / PC     |          | Rec          |          | Rec / Rec Mode              |
|          | FAV- / D.Disp     |          | Display / Media       |          |              |          |                             |
|          | FAV- / D.Disp     | +        | Shift + Down          |          |              |          |                             |

