





 




 






 
 

 
 


 
 

 

 

 


 
 

 
 
 

 
 













 
 
 

 
 









Original	Recharge	Original	Recharge
 Power	 Power	 Vol-	 Vol -
 TV Power	 Shift + Power	 FAV	 Pre Ch
 TV Input	 AV	 Red	 Red
 Open / Close	 Exit	 Green	 Green
 1	 1	 Yellow	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 Top Menu	 Shift + Menu
 4	 4	 Top Menu	 D. Menu
 5	 5	 Pop Up / Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Audio	 Dual	 Return	 Back
 Subtitle	 Subt	 Options	 Options
 Vol+	 Vol +	 Home	 Smart





Original	Recharge	Original	Recharge
 I<<	 I<<		
 Pause	 Pause		
 >>I	 >>I		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Display	 Info		
 Stop	 Stop		
 SEN	 Media		

