



Original		Recharge		Original		Recharge	
	Power		Power		♪ / S.Mode		Shift + Dual
	[i+]		Info		⦿ / P.Mode		Shift + Format
	DTT/TV		TV/R		Vol+		Vol +
	AV1		Shift + 1		Vol-		Vol -
	AV2		Shift + 2		I/II		Dual
	AV3		Shift + 3		Mute		Mute
	AV4		Shift + 4		P+		Ch +
	AV5		Shift + 5		P-		Ch -
	RGB1		Shift + 7		1		1
	RGB2		Shift + 8		2		2
	Menu		Menu		3		3
	Back		Back		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	OK		Ok		9		9




 









 

 

 








 
 




Original		Rechange		Original		Rechange	
	0		0				
	2-4-12 / []		3D				
	[]		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[]		List				
	[]		Smart				
	[...]/Slide Show		Subt				
	[]/?/Rotate		Pre Ch				
	[]		Text				
	Swivel		Sleep				
	[<>]		Format				
	Photo		Media				





	Original	Recharge	Original	Recharge
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Play			
	Stop			
	Pause			
	<<			
	>>			
	P+			
	P-			





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

