









 








 




 
 
 



 

 


 




 

 




 
 
 
 



 

 
 








 




	Original	Recharge	Original	Recharge
	Power		Power	
	[i+]		Info	
	DTT/TV		TV/R	
	AV1		Shift + 1	
	AV2		Shift + 2	
	AV3		Shift + 3	
	AV4		Shift + 4	
	AV5		Shift + 5	
	RGB1		Shift + 7	
	RGB2		Shift + 8	
	Menu		Menu	
	Back		Back	
	Up		Up	
	Down		Down	
	Right		Right	
	Left		Left	
	OK		Ok	
	♪ / S.Mode		Shift + Dual	
	⦿ / P.Mode		Shift + Format	
	Vol+		Vol +	
	Vol-		Vol -	
	I/II		Dual	
	Mute		Mute	
	P+		Ch +	
	P-		Ch -	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	





Original		Rechange		Original		Rechange	
	0		0				
	2-4-12 / []		3D				
	[]		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[]		List				
	[]		Smart				
	[...]/Slide Show		Subt				
	[]/?/Rotate		Pre Ch				
	[]		Text				
	Swivel		Sleep				
	[<>]		Format				
	Photo		Media				





 
 
 













 
 




 
 

 

 

 

 

 

 




	Original	Rechange	Original	Rechange
	Power	Power		
	OK	Ok		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		
	Menu	Menu		
	Play	Play		
	Stop	Stop		
	Pause	Pause		
	<<	<<		
	>>	>>		
	P+	Ch +		
	P-	Ch -		





Original		Recharge		Original		Recharge	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

