




 



 


 
 

 





 







 

 
 


 
 


 
 

 

 


 
 





 

 



 



 






 

 

 
 
 






 
 



 
 
 
 
 

 




Original		Rechange		Original		Rechange	
	Power		Power		Blue		Blue
	Mute		Mute		TV / DTV		Smart
	1		1		Menu		Menu
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Guide		Guide
	8		8		Back		Back
	9		9		P-		Ch -
	0		0		P+		Ch +
	i		Info		Vol+		Vol +
	AV		AV		Vol-		Vol -
	Red		Red		I/II		Dual
	Green		Green		OO		Shift + Dual
	Yellow		Yellow		TV / Radio		TV/R





	Original	Recharge	Original	Recharge
	Power			
	Menu			
	Back			
	OK			
	Up			
	Down			
	Right			
	Left			
	<<			
	Play			
	>>			
	Stop			
	Pause			
	Rec / Top Menu			
	↑			
	↓	