 




| Original | | Rechange | | Original | | Rechange | |
|---|------------|---|--------------|---|----------------|---|---------|
|  | Standby/On |  | Power |  | Right/A>E |  | Right |
|  | Movie |  | Red |  | Left/A<E |  | Left |
|  | Music |  | Green |  | Enter |  | Ok |
|  | Sports |  | Yellow |  | Preset/Tune |  | Menu |
|  | Game |  | Blue |  | Auto/Man'L |  | Back |
|  | Input 1 |  | 1 |  | Memory |  | Info |
|  | Input 2 |  | 2 |  | Test |  | Options |
|  | Input 3 |  | 3 |  | Position |  | 3D |
|  | Input 4 |  | 4 |  | Area |  | Exit |
|  | FM |  | 5 |  | SW+ |  | 7 |
|  | Dock |  | 6 |  | SW- |  | Guide |
|  | Vol+ |  | Vol + |  | Center+ |  | 8 |
|  | Vol- |  | Vol - |  | Center- |  | 0 |
|  | Mute |  | Mute |  | Sur.+ |  | 9 |
|  | Stereo |  | Shift + Dual |  | Sur.- |  | Pre Ch |
|  | Up/+ |  | Up |  | Stop/Freq/Text |  | Stop |
|  | Down/- |  | Down |  | Pause/Mode PTY |  | Pause |





| Original | Recharge | Original | Recharge |
|---|---|----------|----------|
|  Play/PTY SEEK |  Play | | |
|  I<< |  I<< | | |
|  >>I |  >>I | | |
|  Dock Mode |  D. Menu | | |
|  On Bluetooth |  Smart | | |
|  Off Bluetooth |  Media | | |
|  Audio Delay |  Dual | | |
|  Enhancer |  Text | | |
|  Night |  AV | | |
|  Disp. Mode |  Format | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

