














 
 



 

 

 


 

 

 
 


 

 
 

 
 

 
 
 


 
 
 

 


 


 





Original		Rechange		Original		Rechange	
	Standby/On		Power		Right/A>E		Right
	Movie		Red		Left/A<E		Left
	Music		Green		Enter		Ok
	Sports		Yellow		Preset/Tune		Menu
	Game		Blue		Auto/Man'L		Back
	Input 1		1		Memory		Info
	Input 2		2		Test		Options
	Input 3		3		Position		3D
	Input 4		4		Area		Exit
	FM		5		SW+		7
	Dock		6		SW-		Guide
	Vol+		Vol +		Center+		8
	Vol-		Vol -		Center-		0
	Mute		Mute		Sur.+		9
	Stereo		Shift + Dual		Sur.-		Pre Ch
	Up/+		Up		Stop/Freq/Text		Stop
	Down/-		Down		Pause/Mode PTY		Pause



SEEK

