



Original		Recharge		Original		Recharge	
	Power		Power		Exit		Exit / Cancel / Clear
	1		1		?		D.Menu / Top
	2		2		@		Smart / List
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		Back		Back / Return
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Tools		Setup / OPT /
	FAV		Fav / Marker / PC		Down		Down
	0		0		Guide		Guide / EPG / -/--
	TXT		Text / Goto		Vol+		Vol+
	Red		Red / Netflix / Search		Source		AV / Input / RDS
	Green		Green / APP / Repeat		P+		CH+ / Page+
	Yellow		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue		Blue / Prime Video / Random		Mute		Mute / Dimmer





Original		Recharge		Original	Recharge
	P-		CH- / Page-		
	<		<< / Preset-		
	>		>> / Preset+		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	3D		Picture / Format		
	..O		Zoom / Size		
	[...].		Subtitle / EQ		
	Netflix		Shift + Red / Netflix /		
	My Media		Display / Media		

