



Original	Rechange	Original	Rechange
	On		Power
	Standby		Shift + Power
	Return		Back / Return
	Setup		Setup / OPT /
	CH+/Disc+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	CH-/Disc-		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Audio Sel		Audio / Lang I/II
	CH Sel / Top Menu		D.Menu / Top
	Test / Menu		Menu / Home
	Muting		Mute / Dimmer
	Level Down		Shift + CH- /
	Level Up		Shift + CH+ /
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec / Random		Blue / Prime Video / Random
	Rec / Random		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Input Sel. DVD		2
	Input Sel. CD		3
	Input Sel. V1		1
	Input Sel. V2		4
	Input Sel. TAP		5
	Input Sel. TUN		6





Original	Recharge
 Input Sel. V3	 7
 Input Sel. V4	 8
 Input Sel. V5	 9
 Input Sel. PH	 0
 Pure A	 Shift + 1
 Direct	 Shift + 2
 Stereo	 Shift + 3
 Surr.	 Eject / Surround
 Surr.	 Shift + 4
 All St.	 Shift + 5
 DSP	 Shift + 6
 SP A	 Shift + 7
 SP B	 Shift + 8
 CINE FLTR	 Shift + 9
 Display	 Display / Media
 Dimmer	 Shift + Mute / Dimmer
 Zone 2	 Smart / List

Original	Recharge





Original	Rechange
 Sleep	 Sleep / Timer
 On	 Power
 Standby	 Shift + Power
 Return	 Back / Return
 Setup	 Setup / OPT /
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-
 Audio Sel /	 Audio / Lang I/II
 Audio Sel /	 AV / Input / RDS
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Muting	 Mute / Dimmer
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-

Original	Rechange
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround
 Input Sel. DVD	 Shift + 2
 Input Sel. CD	 Shift + 3
 Input Sel. V1	 Shift + 1
 Input Sel. V2	 Shift + 4
 Input Sel. TAP	 Shift + 5
 Input Sel. TUN	 Shift + 6
 Input Sel. V3	 Shift + 7
 Input Sel. V4	 Shift + 8
 Input Sel. V5	 Shift + 9












Original		Rechange	
	Input Sel. PH		Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10 / --/--		Guide / EPG / --/--
	0		0
	Search/Enter		Fav / Marker / PC
	Search/Enter		Red / Netflix / Search

Original	Rechange





Original		Rechange		Original		Rechange	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		CH+ / Page+		4		4
	Vol+		Vol+		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	Subtitle		Subtitle / EQ		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				

